






—
INSTALLATION INSTRUCTION

Handles

OH274-330L12, OH274-330J12


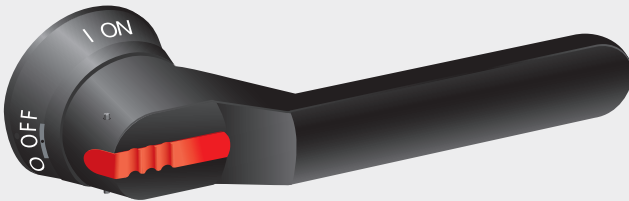


OH274-330L12, OH274-330J12

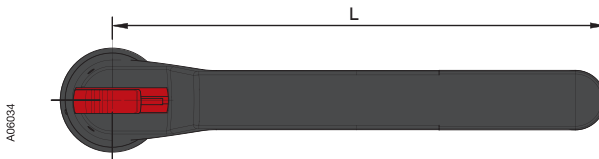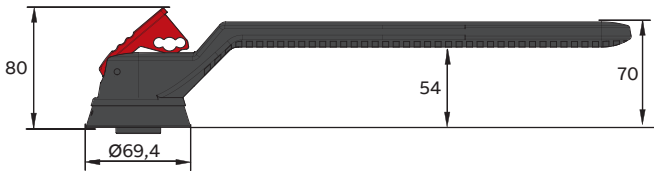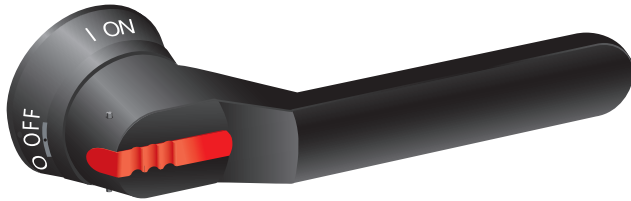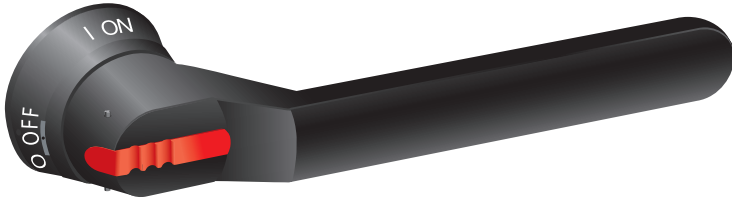


Laji/Type	L
OH_274L12	274
OH_274J12	274
OH_330L12	330
OH_330J12	330


OH274-330L12, OH274-330J12

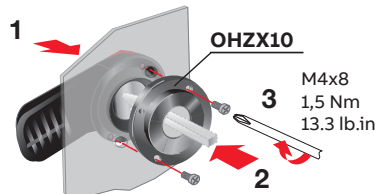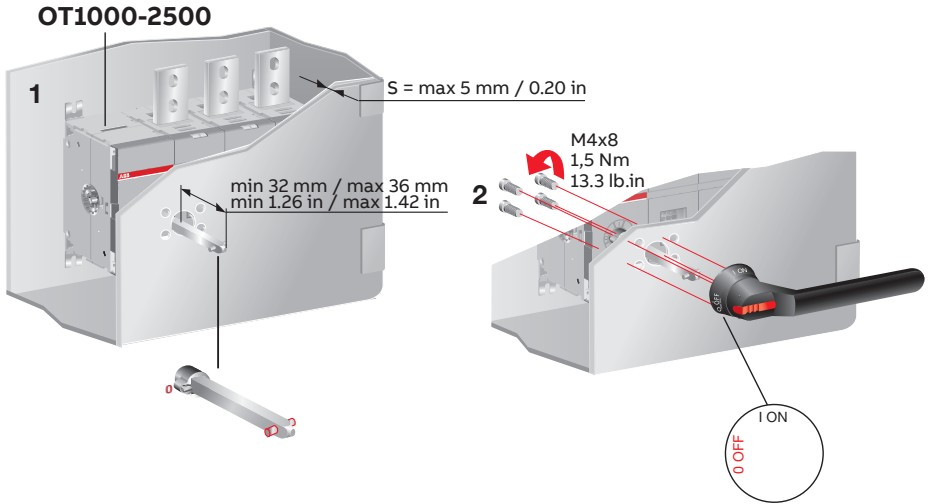

OH274-330L12, OH274-330J12




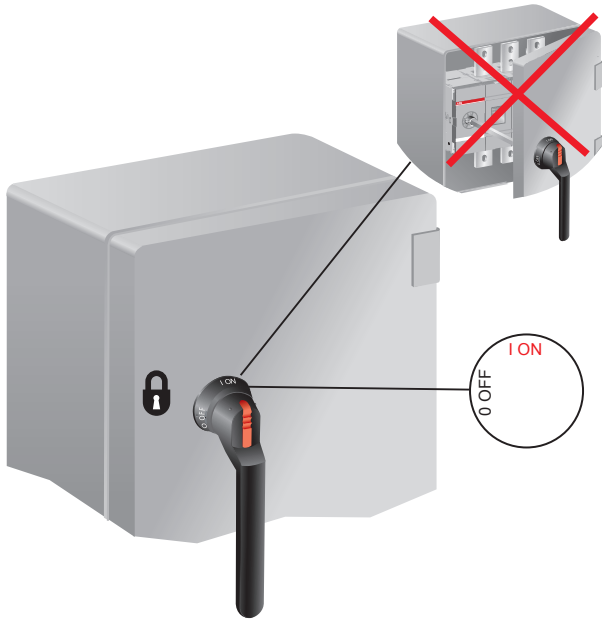


Note!

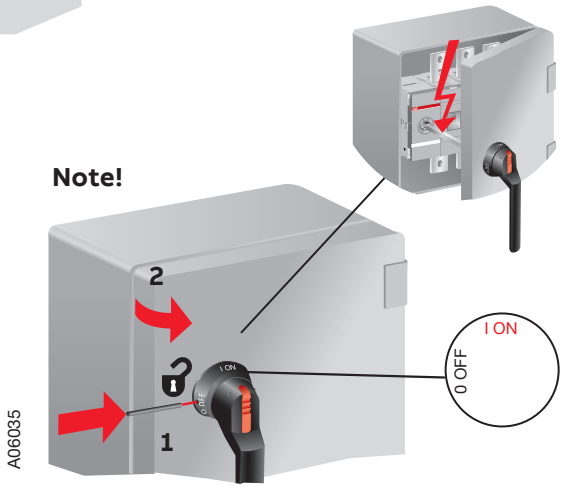

A06035

OH274-330L12, OH274-330J12

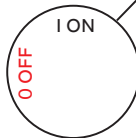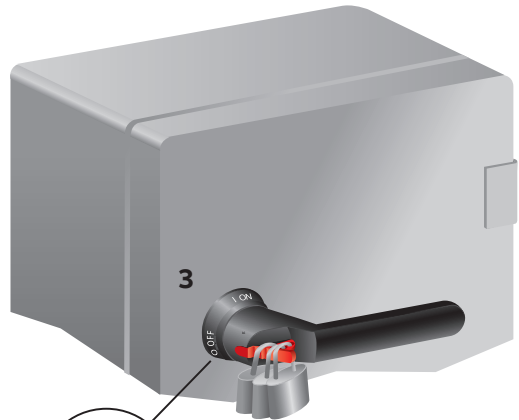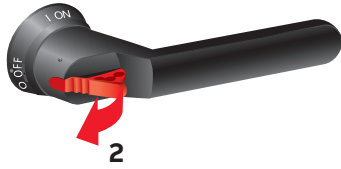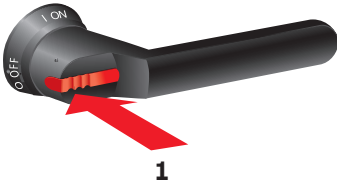


Ø5...8 mm
0.20...0.31 in





OH274-330L12, OH274-330J12

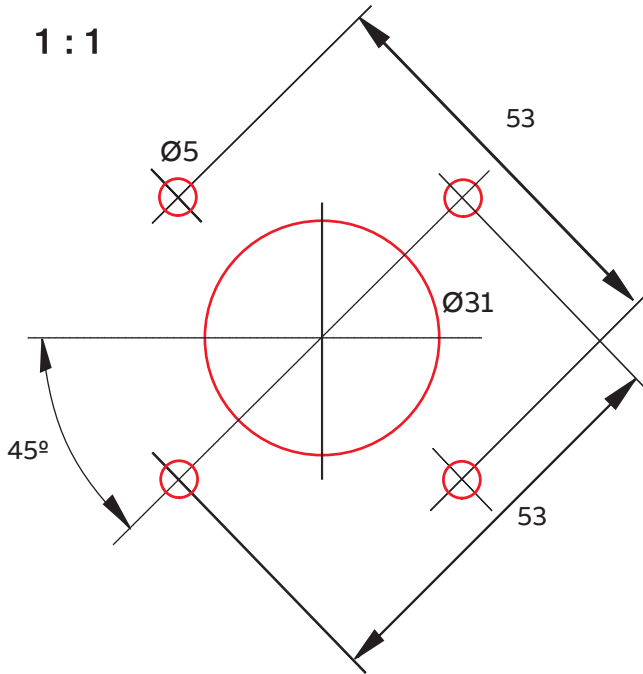



Contact us

ABB Oy
Protection and Connection
P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage